 


CHIAYO

 
Operation manual

SQ-9000 IrDA
Rechargeable Handheld Microphone

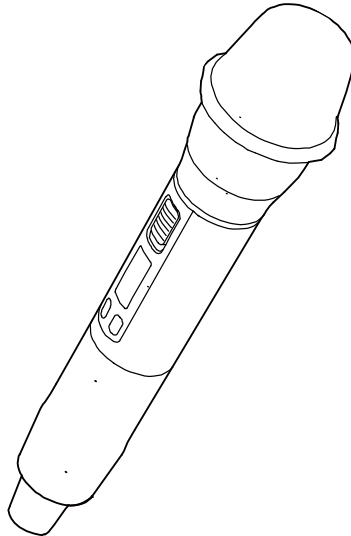


CHIAYO ELECTRONICS CO., LTD.

Parts and functions




- | | | |
|----------------------|------------------------------|----------------------|
| 1. Cartridge | 5. Menu button | 9. Color cap |
| 2. Battery power LED | 6. Setting button | 10. IrDA sensor area |
| 3. Power switch | 7. IrDA synchronizing button | 11. Charging port |
| 4. LCD | 8. Battery compartment | |

 Channel synchronizing of the receiver and microphone

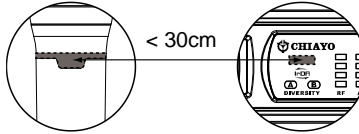

Align infrared areas of the receiver and microphone within 30cm.

 A. Changing the receiver's channel

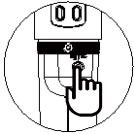

1. Press the synchronizing button of the microphone.
2. **IRDA PLL CALL** will appear on the microphone's LCD denote synchronizing the receiver's channel.
3. If the receiver's channel is synchronized, **PLL SEND OK** will appear. Otherwise, please try again if the LCD shows **IRDA FAIL**.

B. Changing the microphone's channel



1. Press the synchronizing button of the receiver and the receiver will transmit the frequency to the microphone and synchronize the channels.
2. The microphone's channel will be synchronized by the receiver.

If it doesn't work check that you have the IR sensor panels aligned, that they are facing each other, devices are within 30cm of each other, and try again.

Battery installation & indicator

 
This microphone requires 2 x AA batteries to operate.

To install, remove the battery cover and slide the batteries according to the correct polarity into the battery compartment & replace the battery cover.

Note: Batteries contain a corrosive acid that may leak and damage the microphone when stored for a long period. Batteries should be removed from the microphone if it is not to be used for a prolonged period of about 4 weeks or more.

When the microphone is switched ON a blue LED^② will blink once to indicate the batteries installed are in good condition. **If the LED remains illuminated, it means the batteries are weak and a replacement is required.**

Channel setting



1. Use **MENU** button^⑤ to go to the **CHANNEL | BATTERY STATUS** page.
2. The upper-right channel number will flash to allow changes to be made.
3. Press **SET** button to change the channel number.
4. 5 seconds after selecting a channel, it will be automatically saved.

Battery type setting



1. Use **MENU** button^⑤ to go to the **BATTERY TYPE** page.
2. Press **SET** button^⑥ for 3 seconds, then the cursor ← will flash to allow changes to be made.
3. Press **SET** button to select either NiMH (rechargeable battery) or AKLN (alkaline battery).
4. 5 seconds after selecting a battery type, it will be automatically saved.

Important: NiMH battery must be selected when rechargeable battery is being used. Never select AKLN (alkaline) when microphone is intended for charging as alkaline battery isn't rechargeable. Wrong battery selection will result in battery sensing electronics to display wrong and misleading status information.

CHIAYO ELECTRONICS CO., LTD.

Http://www.chiayo.com.tw | Email: sales@chiayo.com.tw

Office: 30, Lane 27, Section 4, Jen-Ai Road, Taipei 10685, Taiwan

Tel: 886-2-27415741 | Fax: 886-2-27525242

Factory: 88, Chung-Hsiao Street 2, Chiayi 60080, Taiwan

Tel: 886-5-2711000 | Fax: 886-5-5767611

