

# WIR RX22-4 SoundPlus® 4-Ch Infrared Receiver


## INSTRUCTIONS FOR USE AND CARE



# Operating Instructions


1. Open battery compartment door on back of receiver by pressing the tab down.
2. If using rechargeable NiMH batteries, slide the Alkaline/ NiMH switch to the NiMH position. Default setting is Alkaline for non-rechargeable batteries. See Figure 1.

**Figure 1: Battery selection switch**

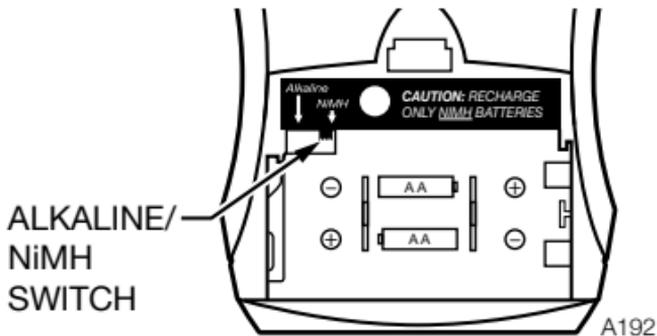

3. Insert 2 AA batteries over the fabric strip. Note correct polarity (+/-).

**Figure 2: WIR RX22-4 Control Panel**

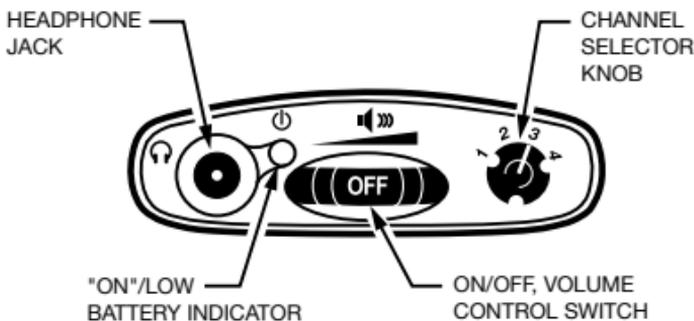

4. Insert earphone or neckloop into the headphone jack.
5. Turn the receiver on by rotating the Volume control knob. The ON indicator should illuminate RED.
6. Select a channel by turning the channel selector knob on the control panel. Choose between 4 standard frequencies: 2.3 MHz (Ch.1), 2.8 MHz (Ch. 2), 3.3 MHz (Ch.3), or 3.8 MHz (Ch. 4). Important: Make sure the receiver frequency matches the transmitter frequency.

**IMPORTANT: Make sure the "SoundPlus® IR" artwork on the front of the unit is not covered while in use. Do not place the receiver in a pocket or purse, or it will not work properly.**

7. Adjust the volume to a comfortable listening level.
8. To turn the receiver off, rotate the Volume control knob to the left until it clicks off. The ON indicator should not be lit. To prolong the battery life of the unit, turn the receiver off when it is not in use.


# Lanyard Clip Installation

For hands-free operation of the RX22-4 receiver, use the provided lanyard clip to secure the unit on your lanyard, pocket or pants.

**To Install:** Position the lanyard clip on the rear of the RX22-4 receiver as shown in Figure 3A. Turn the lanyard clip 180° left or right as shown in Figure 3B. The lanyard clip is now installed and ready for use.

**To Remove:** Turn the lanyard clip 180° so the edge points toward the top of the unit as shown in Figure 3A. Gently pull the lanyard clip away from the unit to remove.

**Figure 3: Lanyard clip installation**

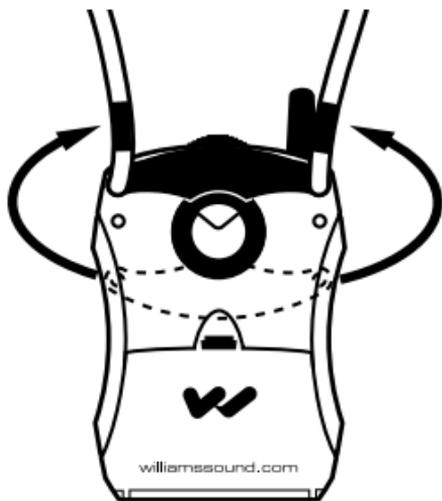

**Figure 3A**

**Figure 3B**

A189

# Battery Information

The WIR RX22-4 uses 2 AA batteries. We recommend using Williams Sound Alkaline batteries (BAT 001) or Rechargeable batteries (BAT 026) for longer battery life than other brand batteries.

## Low Battery Indicator

The “On” indicator on top of the unit will flash to indicate low battery.

## Multi Charger CHG 3512

This optional charger is ideal for customers using rechargeable batteries. It will charge up to 12 receivers at one time. See our website or call us for ordering information.

## Accessories

To order accessories including earphones and replacement earpads, batteries, and chargers, contact Williams Sound at **800-843-3544** or order on-line at: **[www.williamssound.com](http://www.williamssound.com)**.

# Customer Service

If you experience difficulty with your system, call toll-free for Customer Assistance:

**1-800-843-3544 (U.S.A.) or**

**+1 952 943 2252 (Outside the U.S.A.)**

If it is necessary to return the system for service, your Customer Service Representative will give you a Return Authorization Number (RA) and shipping instructions.

Pack the system carefully and send it to:

**Williams Sound LLC.  
Attn: Repair Dept.  
10300 Valley View Rd  
Eden Prairie, MN 55344**



10300 Valley View Rd • Eden Prairie, MN 55344  
800-328-6190 / 952-943-2252 • FAX: 952-943-2174  
[www.williamssound.com](http://www.williamssound.com)

## Limited Warranty

Williams Sound products are engineered, designed and manufactured under carefully controlled conditions to provide you with many years of reliable service. Williams Sound warrants the WIR RX22-4 receiver against defects in materials and workmanship for five (5) years. During the first five years from the purchase date, we will promptly repair or replace the WIR RX22-4 receiver.

Earphones, headphones, batteries, cables, carry cases, and most other accessory products carry a 90-day warranty.

WILLIAMS SOUND HAS NO CONTROL OVER THE CONDITIONS UNDER WHICH THIS PRODUCT IS USED. WILLIAMS SOUND, THEREFORE, DISCLAIMS ALL WARRANTIES NOT SET FORTH ABOVE, BOTH EXPRESS AND IMPLIED, WITH RESPECT TO THE WIR RX22-4 RECEIVER, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. WILLIAMS SOUND SHALL NOT BE LIABLE TO ANY PERSON OR ENTITY FOR ANY MEDICAL EXPENSES OR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY ANY USE, DEFECT, FAILURE OR MALFUNCTION OF THE PRODUCT.

# Safety Information

## HEARING SAFETY

### CAUTION!

This product is designed to amplify sounds to a high volume. To protect your hearing and the hearing of others:

1. Make sure the unit is OFF or the volume is turned down before putting on the earphones.
2. Set volume level at the minimum setting you need to hear.
3. Do not allow children or other unauthorized persons to have access to this product.

## BATTERY SAFETY

### CAUTION!

Do not attempt to recharge disposable batteries, which may explode, release dangerous chemicals, cause burns, or cause other serious harm to the user or product.

## MEDICAL DEVICE SAFETY

### CAUTION!

Before using this product with a pacemaker or other implantable medical device, consult your physician or the manufacturer of the device to make sure that you are using this product in accordance with their safety guidelines.

## Recycling Instructions

### Help Williams Sound protect the environment!



Please do not dispose of equipment or used batteries in the household trash. Take the equipment to an electronics recycling center or return to the factory. Take batteries to a retail or community recycling location.



# System Specifications

## Personal PA® RX22-4 Receiver

**Dimensions:** 4.1" L x 2.85" W x 1.2" H (104.1 mm x 72.4 mm x 30.4 mm)

---

**Weight:** 4.5 oz (127 g) with batteries

---

**Battery Type:** 2x AA, alkaline (BAT 001) or NiMH (BAT 026)

---

**Battery Life:** Alkaline: 60 hours, NiMH: 30 hours/charge

---

**Charging Contacts:** For use only with CHG 3512

---

**Carrier Frequency:** Channel 1: 2.3 MHz, Channel 2: 2.8 MHz  
Channel 3: 3.3 MHz, Channel 4: 3.8 MHz

---

**Controls:** ON/OFF/VOLUME: Combination thumbwheel knob

---

**Channel Selector:** four-position rotary switch

---

**Indicators:** Red LED "ON" indicator, flashes to indicate Low battery

---

**Output Connector:** 3.5 mm stereo phone jack, accepts either stereo or mono plug

---

**Audio Output Power:** 15 mW max at 32  $\Omega$

---

**Acoustic Output:** 125 dB SSPL90 with HED 021; 110 dB SSPL90 w/ EAR 013

---

**Approvals:** CE, FCC, RoHS, WEEE

---

**Warranty:** 5 years on receiver, 90 days on accessories

---