


CHIAYO

Operation manual

COACH 400

Personal Wireless Portable Amplifier

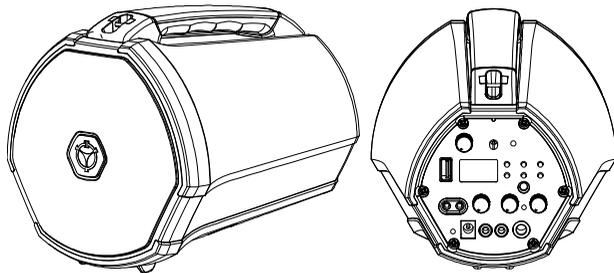

COACH 400 Personal Wireless Portable Amplifier

Congratulation and thank you for the purchase of this all-in-one ultra compact portable sound system. To ensure a trouble-free operation, please read this manual thoroughly to fully understand its controls and functions.

Configuration

- Switch mode power supply (100-240VAC DC:18V/2.7A)
- Operation manual
- Shoulder strap


Optional accessories

- Receiver/MP3 recorder module
- Wireless handheld or bodypack transmitter
- Tripod stand (ST-30)
- Storage bag (SB-41)

Remark

Manufacturer reserves the rights to change the above combinations without prior notice.

Rear control panel

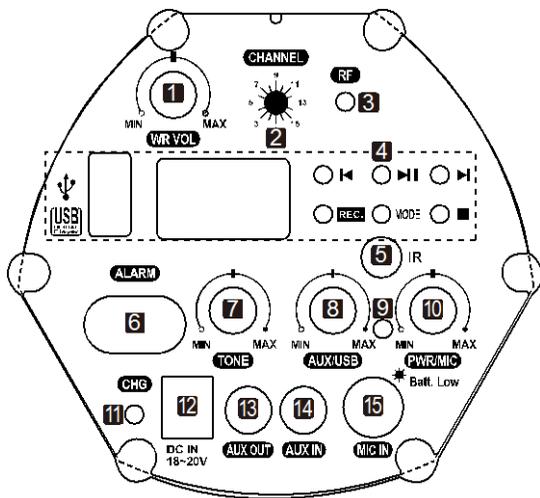

1. Power and volume control of wireless microphone
2. Channel selector
3. RF signal indicator
4. USB digital recorder player
5. IR sensor area
6. Emergency alarm(2 sounds for selection)
7. Tone control
8. Volume control of audio input/USB
9. Power/Battery low indicator: Normal(GREEN)/battery low(RED)
10. Power / Volume control of wired microphone
11. Charging indicator: During charging(RED)/Charging finished(GREEN)
12. DC in
13. Aux output
14. Aux input
15. Wired microphone input

Recharge its inbuilt Lithium battery before first use

After unpacking the unit for the first time, please recharge the unit for about 4~5 hours before operation. This is absolutely necessary as the built-in rechargeable battery might have been discharged naturally due to long shipment and storage time, even though it had been fully charged in the factory prior to shipment.


To charge the battery, just plug in the DC end of the switch mode power supply into the DC IN (12) of the unit and charging will start automatically. During the charging process, the charging indicator LED (11) will be RED. When this LED turns GREEN, this battery is then fully charged.

Battery maintenance

- Battery should be charged regularly after every use or every month
- Do not short, disassemble, heat or put the battery into a fire.
- Do not solder a battery directly.
- Be sure to use the specified type of battery.
- Note the correct polarity when inserting a battery in the unit.
- Avoid locations exposed to the direct sunlight, high temperature and high humidity when storing batteries.


Operating procedures

To operate this portable sound unit, turn on the main power switch ⑩ and the power indicator ⑨ will be GREEN. If it turns RED, its battery power might be too low and recharging is necessary. The main power switch does not switch on the wireless microphone and USB digital recorder player as each of them has an individual Power / Volume control.

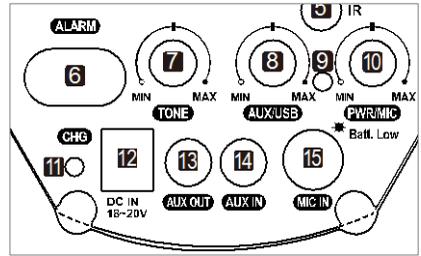

Operating the built-in wireless microphone system

 
To use the wireless microphone, first turn on the main power switch ⑩, then turn on the WR power/volume control switch ①. Switch on the corresponding transmitter and set this system to the same frequency and RF signal LED ③ will grow GREEN.



Operating the wired microphone

There is a MIC IN jack ⑮ with dedicated volume control ⑩ for this portable sound unit. To use a wired microphone, just insert its phone plug into the MIC IN jack ⑮. Then turn on the Power/volume control ⑩ and rotate it to adjust the volume.

DPR-400m MP3 recorder player module

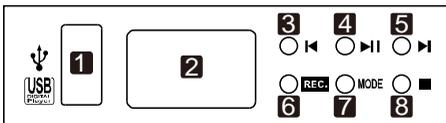

1. USB 2.0 input
2. LCD display
3. Press to return to previous track, press and hold to fast reverse.
4. Press to play/pause or stop recording.
5. Press to go to next track, press and hold to fast forward.
6. Press to record.
7. Press to switch repeat modes.
8. Press to stop playing or recording.



remote control ▲

Operating functions on the panel and the remote

Operating function	On the panel	On the remote
Play/pause	Press 	
Record	Press  to record and  or  to stop.	Press  to record and  or  to stop.
Skip forward	Press 	Press 
Fast forward	Press and hold 	Press and hold 
Skip backward	Press 	Press 
Fast backward	Press and hold 	Press and hold 
Next folder	-	Press 
Previous folder	-	Press 
Track select (#0-9)	-	input track number, then press 
Repeat mode switch (ALL/SINGLE/FOLDER)	Press 	Press 
Volume control	-	Press  or 
A-B section play	-	Press  to start, again to play section and again to stop
Delete tracks	-	Press  to delete track and again to confirm your delete
Mute	-	press  to mute/recover

Note:

- Supports FAT and FAT32 file systems only.
- Supports MP3, WAV and WMA music formats only
- Record track format :MP3; Bit rate: 128kbps; Sampling frequency: 44kHz
- Recordable only when USB is detected.
- Record files will be stored in the **RECORD** folder of USB.
- The files will be named as **FILE_001, FILE_002, FILE_003...**etc.
- The name of a deleted track won't be applied to its next one.
- Recordable until **FILE_999** appears with LCD displaying **Num Full**.
- LCD displays **USB FULL** when insufficient memory left.
- Don't remove the USB during the recording process in case the interrupted track might be damaged.

CHIAYO ELECTRONICS CO.,LTD.

Http://www.chiayo.com.tw | Email: sales@chiayo.com.tw
 Office: 30, Lane 27, Section 4, Jen-Ai Road, Taipei 10685, Taiwan
 Tel: 886-2-27415741 | Fax: 886-2-27525242
 Factory: 88, Chung-Hsiao Street 2, Chiayi 60080, Taiwan
 Tel: 886-5-2711000 | Fax: 886-5-5767611

