

Grandview

Protecting Your Screen:

- Keep away from direct sunlight or high temperatures.
- Examine both the front and back surfaces before retracting into the case to make sure it is free of dust, dirt, insects or other foreign matter.
- Use a soft brush or cloth to lightly remove any foreign particles.

Cleaning Your Screen:

- Do not use any solvents, chemicals or abrasive cleaners on the screen surface.
- Use a mild detergent with warm water to remove any marks on the surface or screen case.
- Always immediately dab the screen with a soft cloth to avoid soap marks.
- Do not scrub the surface.

Warranty: 12 Months

Imported and distributed in Australia by



1800 251 367
orders@ambertech.com.au
ambertech.com.au

Grandview



User's Manual for Grandview 4K/8K Fixed Frame Screen


Model: GREEDGE4K92H/GREEDGE4K100H/GREEDGE4K106H
/GREEDGE4K112H/GREEDGE4K120H/GREEDGE4K94C
/GREEDGE4K109C/GREEDGE4K113C/GREEDGE4K123

GREEDGE8K92H/GREEDGE8K100H/GREEDGE8K106H
/GREEDGE8K112H/GREEDGE8K120H/GREEDGE8K94C
/GREEDGE8K109C/GREEDGE8K113C/GREEDGE8K123C

The Amber Technology logo, consisting of a stylized orange waveform icon followed by the text "Amber TECHNOLOGY" in a bold, sans-serif font.


ambertech.com.au

Product Structure

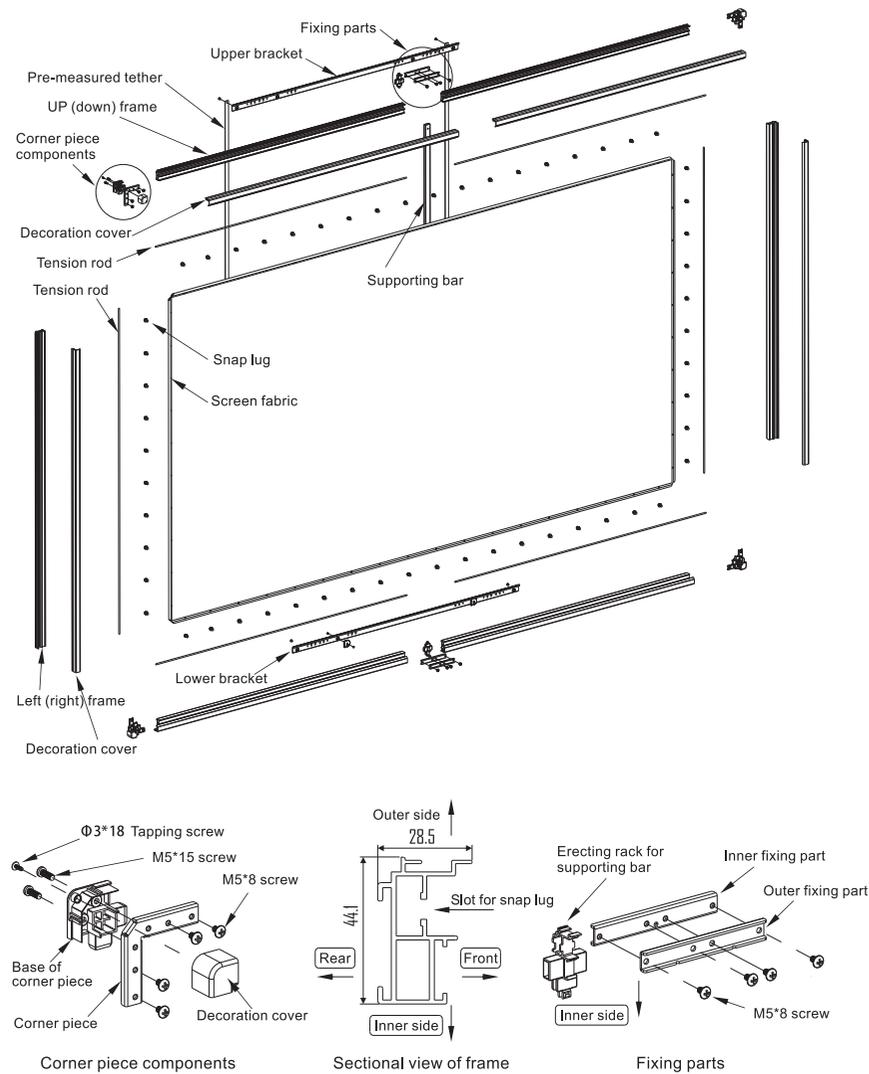

Sketch for structure of Edge fixed frame screen

Overall view and dimension

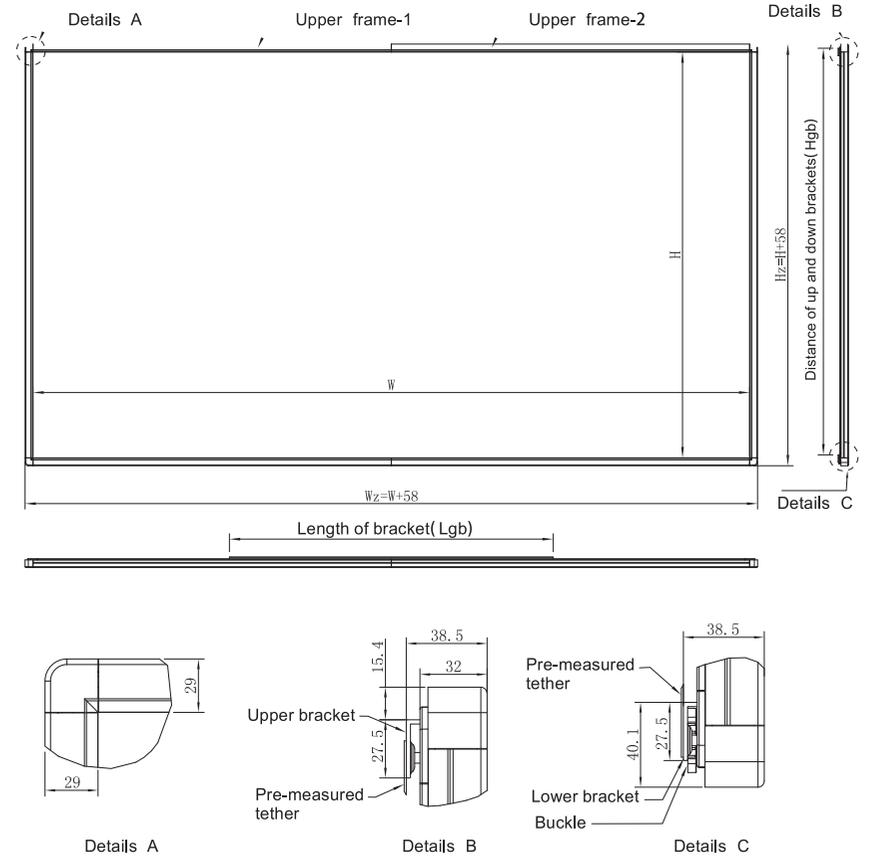

Format	Specification (Inch)	Viewing Area (m m)		W z (m m)	H z (m m)	H g b (m m)	L g b (m m)	Package (m m)		
		W	H					L	H	W
16:9	92	2037	1145	2095	1203	1147	1000	1315	151	125
16:9	100	2214	1245	2272	1303	1247	1000	1415	151	125
16:9	106	2346	1319	2404	1377	1321	1000	1489	151	125
16:9	112	2479	1395	2537	1453	1397	1000	1565	151	125
16:9	120	2656	1494	2714	1552	1496	1200	1664	151	125
16:10	82	1766	1104	1824	1162	1106	800	1274	151	125
16:10	94	2025	1265	2083	1323	1267	1000	1435	151	125
16:10	109	2348	1467	2406	1525	1469	1000	1637	151	125
16:10	113	2434	1521	2492	1579	1523	1000	1691	151	125
16:10	123	2649	1656	2707	1714	1658	1200	1826	151	125

7. Assembly of screen fabric

- Make sure the screen fabric is assemble in the place where is clean and tidy.
- Please put the rolled screen fabric onto frames with front side of fabric facing up, then roll the fabric to spread slowly. (diagram 19)
- Please put the tension rods through 4 edges of fabric. Please be noted that the 2 pcs of left and right tension rods are in the equal length, so are the 4 pcs of up and down tension rods.
- Adjust distance from snap lugs according to the snap lugs's holes at the edges of fabric, then hold the fabric with hands to put the snap lugs go through the holes. (diagram 21) (It is advised to handle the snap lugs on up and down frames. Snapping from middle to edges.)
- Please make necessary adjustment on fabric to keep it smooth and flat from wrinkles.

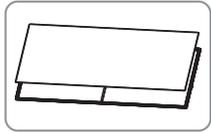


Diagram 19

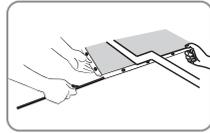


Diagram 20

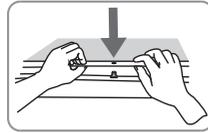


Diagram 21

8. Installation of cover for corner piece and frame

- Mount the cover for corner piece onto the slot of base and use $\Phi 3 \times 8$ mm tapping screws to fix it. (diagram 22)
- Mount the frame cover with rubber onto the frame and press it down in position until it is tight. (see diagram 23-24). The frame cover with label should be placed onto lower right corner at the front side of screen.

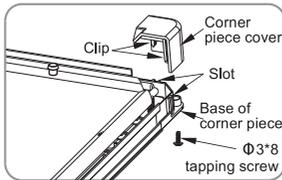


Diagram 22

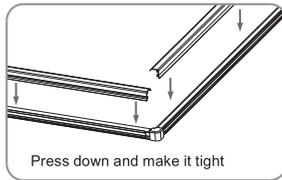


Diagram 23

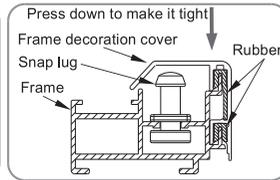


Diagram 24

9. Assembly of bracket set and mount the screen onto wall

- Please find out the position to put the screen and drill holes in wall according to the mounting holes of bracket. Please fix the bracket onto wall with the expansion tubes and screws provided.
- Please let the lower bracket drop naturally and it would be in position with help of the pre-measured tether. Please mark the position of mounting holes for lower bracket, drill the holes and fix the lower bracket with expansion tubes and screws provided.
- Measure distance from upper and lower brackets which should be $H+2$ mm. Please make necessary adjustment if the distance doesn't meet the above.
- Turn the buckle on lower bracket counter clockwise until it reaches the end to make the lock mark on the buckle stops at direction of 12 or 3 o'clock (upright or right position) to make it unlock (see diagram 26)
- Please mount the screen onto brackets. Make sure hooks of brackets go in the slots of up and down frames. (see diagram 27-28)
- Please finish the installation by turning the buckle clockwise until it reaches the end to lock the lower frame. (see diagram 26 on the right and diagram 29)

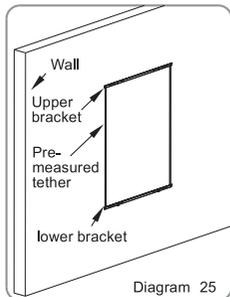


Diagram 25

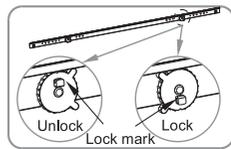


Diagram 26

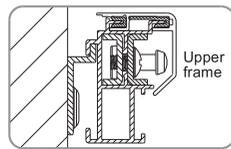


Diagram 27

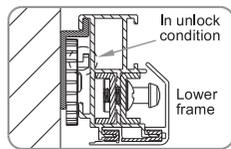


Diagram 28

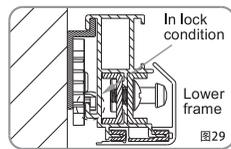


Diagram 29

Note

- Please pay attention to the rear and front sides of screen fabric during installation. There is label attached to rear side of screen fabric.
- Kindly handle with care to avoid distortion due to crash of the aluminum frame material.
- In case of infrequent use, please cover the screen fabric with cloth (or something else fit to cover) to prevent screen fabric from dusty .
- Do not clear screen fabric with detergent of corrosivity such as diluent.
- Please clean the velvet wrapped on the frame along the velvet grains. Prevent velvet from crash to avoid damage.
- Do not scrape screen fabric with fingers or edge tool, which would leave flaws or marks on fabric.
- In order to avoid any unexpected injury, it is advisable to manage and install the fixed frame screen by adult.

Warning: Regardless of the warnings would possibly lead to damage to product or casualty due to any improper operation.

Mandatory: The screen should be installed where is strong enough to bear its weight, or it would cause accident by falling off.

Note: Please don't disassemble screen for replacement of parts. Please kindly contact to after sale department for service if any fault. It is not prior to notice if there is any change on product. Please refer to the product.

Parts List

- Up and down frames(4 pcs in equal length)
- Left and right frames(2 pcs in equal length)
- Decoration cover for up and down frames (4 pcs in equal length)
- Decoration cover for left and right frames (2 pcs in equal length)
- $\Phi 5$ mm tension rods for up and down frames (4 pcs in equal length)
- $\Phi 5$ mm tension rods for left and right frames (2 pcs in equal length)
- Supporting bar (1 pcs)
- Mounting brackets with pre-measured tether (1 set)
- Screen fabric (1 pcs)
- Corner piece parts (4 sets)
- Cover for corner piece (4 pcs)
- Inner fixing parts for frame (2 pcs)
- Outer fixing parts for frame (2 pcs)
- Erecting rack for supporting bar(4 pcs)
- Snap lug (provided according to screen size)
- M5*8mm screw (24 pcs)
- $\Phi 3 \times 8$ mm tapping screw (4 pcs)
- User's manual (1 copy)
- Warranty card (1 set)
- Qualification certificate (1 set)
- $\Phi 5 \times 40$ tapping screw (4 pcs) and expansion tube(4 pcs)

Installation Instructions

Open the package and take out all of the parts. Kindly check the types and quantity of the parts according to user's manual. Please put all of frames on clean and flat dest or ground in a square. (see diagram 1) Please pay attention to correct placement of aluminum frames. (the front side should be facing up, while the inner side should be facing the center of the screen). Please follow the order shown in diagram to assemble the frames.

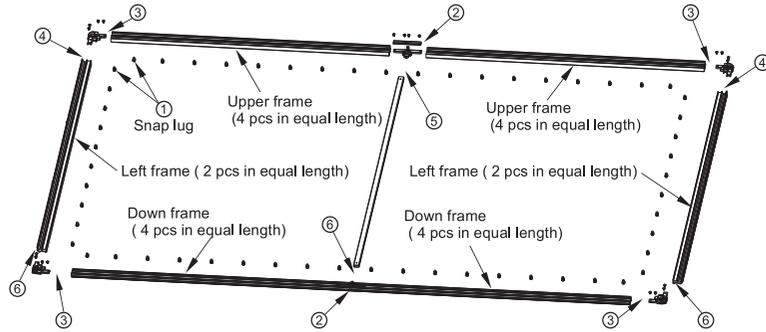


Diagram 1

1. Please put the snap lugs into lug's slot of frame (see diagram 2) according to the Nos. of holes in the screen fabric.

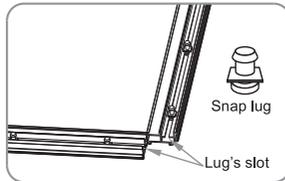


Diagram 2

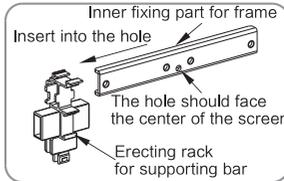


Diagram 3

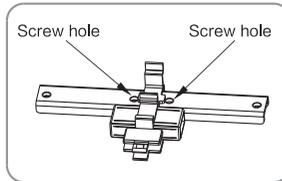


Diagram 4

2. Joint of up and down frames

- Put the inner fixing part for frame through hole on the base of supporting bar (see diagram 3). Please pay attention to the difference of inner and outer fixing part of frame. The inner fixing part is with 5 holes, 4 out of which has screw thread. The middle hole of inner fixing part should face the center of screen. It would cause failure in assembly if mistaking the inner and outer fixing part or the incorrect placement of it. Please refer to diagram 4 for correct assembly.
- Please insert the base of supporting bar with inner fixing part mentioned above into the frame (diagram 5) to join the 2 pcs of upper frames together. Please be noted that the base of supporting bar should be inserted till it reaches the end to avoid any apparent seam between frames and the base of supporting bar.
- Assembly of outer fixing part for frame. There are 4 holes in it and 2 gaps on the edge. The gaps should face the center of screen (diagram 6). Please put the outer fixing part onto the slot for snap lugs and adjust its position to match the holes of inner fixing part with screw thread. Please fix the inner and outer fixing parts wit M5*8 screws (diagram 7).
- Assemble lower frame in the same way.

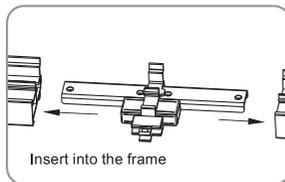


Diagram 5

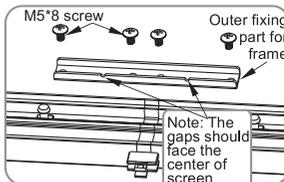


Diagram 6

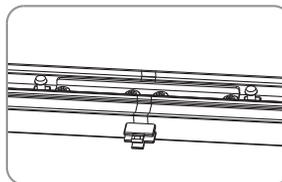


Diagram 7

Installation Instructions

3. Assembly of corner piece

- Please insert corner piece into the slot of horizontal frame till it reaches the end. There should not be any apparent seam found. Please use M5*8 screw to fix it, see diagram 8-10.
- Assemble other corner piece in the same way.

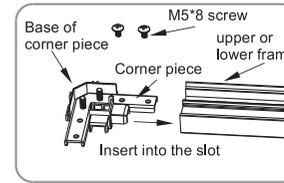


Diagram 8

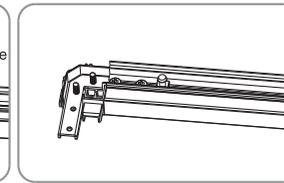


Diagram 9

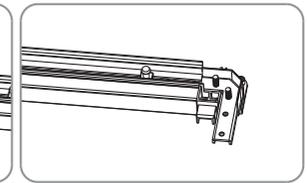


Diagram 10

4. Join the frames together

- Please insert the other side of corner piece into the vertical frame till it reaches the end. There should not be any apparent seam found. Kindly use M5*8 screw to fix it, see diagram 11-12.
- Join the other vertical frame with up and down frame in the same way, see diagram 13.

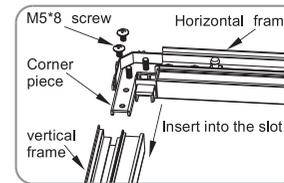


Diagram 11

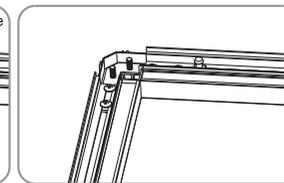


Diagram 12

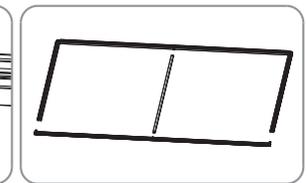


Diagram 13

5. Assembly of supporting bar

- Attach the supporting bar with the erecting rack along the extending part on it till it reaches the end and the hook would clip into the square hole in the supporting bar, see diagram 14-15.

Note: It is not advise to disassemble or assemble the supporting bar frequently. If it is necessary, please use the flat screw driver to insert into square hole in supporting bar to unlock the hook for disassembly, see diagram 16.

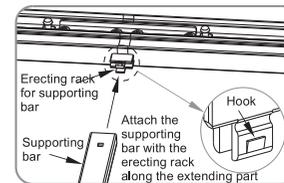


Diagram 14

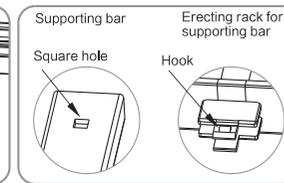


Diagram 15

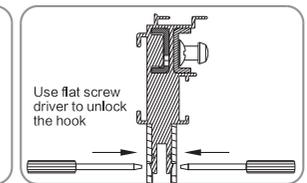


Diagram 16

6. Join the other set of horizontal frame

- Join the other set of horizontal frame with the vertical frames with screw in the same way as the step 4 and step 5 mentioned above, see diagram 17-18. Please check it again to see if all of the screws are tighten.

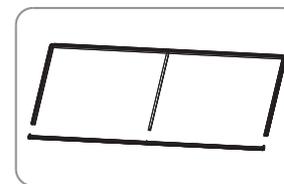


Diagram 17

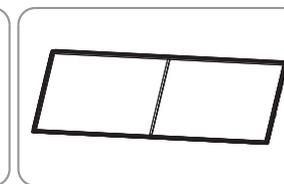


Diagram 18